



2012 Compulink AutoStart Settings at MIR

The Compulink AutoStart system is integrated into every class that is run at MIR, from Sportsman to Pro. This system starts the tree automatically when the Compulink senses two fully staged vehicles so the starter can concentrate more on the track and conditions of the race.

Here's how it works... When the system sees both cars prestaged and ONE of the cars staged, it starts a timer (actual length of timer is class specific, please inquire with the tower for the timer length in your particular class). If the second car does not enter the staging beams within the timer's parameters, a redlight is activated for that car. This redlight will NOT be negotiated under any circumstances! Remember, the system needs to see three lights before it starts the timer - two prestages and a stage.

DO NOT TRY TO BURN DOWN YOUR OPPONENT

CLASS	STAGED MINIMUM	STAGED TO START	TIMEOUT (IN SECONDS)
ET Series - Top ET	0.5	1.1	10
ET Series - Modified ET	0.5	1.1	10
ET Series - Motorcycle ET	0.5	1.1	10
ET Series - Junior Dragster	1.0	0.8	15
Midnight Madness Series - Outlaw Drag Radial	0.5	0.8	7
Midnight Madness Series - X275	0.5	0.8	7
Midnight Madness Series - Street Classes	0.5	1.1	10
Pro Mod / Last Man Standing	0.5	0.3	7
Test & Tune	0.5	1.1	10
MIROCK Series - Pro Mod	0.5	0.8	7
MIROCK Series - Pro Street	0.5	0.8	7
MIROCK Series - Real Street	0.5	0.8	7

MIR utilizes the CrossTalk System in Top ET and Test & Tune Gambler's classes. Please check with Race Control if you are not familiar with how the system works or if you are unsure whether or not CrossTalk is used in your class. Loss due to driver error on the CrossTalk System is final and will not be negotiated.

- ⊙ STAGED MINIMUM The amount of time needed after the tire breaks the beam to begin AutoStart.
- ⊙ STAGED TO START The amount of time needed for both cars to be staged to begin the AutoStart countdown.
- ⊙ TIMEOUT The amount of time before the tree activates when one car is pre-staged and staged, and the other car is only pre-staged.
- ⊙ LED COMPENSATION Pro tree professional classes set to .03, Pro tree sportsman classes set to .02 and compensator is disabled for all Full tree classes.